

Remote Control Functions



COX Digital Cable Quick Reference Guide

Power On/Off

Press either , , or located on the Power Panel at the top of your Remote to control power. (For more information, refer to the Viewer's Notes on the inside front cover of your Cox Digital Cable User's Guide.)

Volume

Control volume using the button located at the lower left of the Navigation Panel of your remote. (Your remote must be programmed to operate either your TV or digital receiver volume. See page 17 in the User's Guide.)

Change Channels

Use the numeric keys located on the Numeric Keypad of your remote. Key in the channel numbers. You can press the button immediately after you enter the number to speed up the channel change. (For more information, see page 23 in your User's Guide.)

Interactive Program Guide (IPG)




Press located on the left, just below the Power Panel, to find out what's showing on digital television for up to one week. Press for current time and channel. You can locate programs by Time, Title or Theme. The IPG defaults to Search by Time.

To browse by either Title or Theme, press located on the left of the Function Panel in the middle of your remote. Use to select **Title** or **Theme** in the menu on the left side of your TV screen. Press .

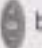 

If you select Title: Press to access the alphabet and scroll to highlight the first letter of the title you're looking for. Press and a list of titles will appear. Use to highlight the program you wish to view. (Those currently playing are indicated with a *.) Press to watch the highlighted program.

If you select Theme: Press and an alphabetical list of theme categories will appear. Use to highlight your selection and press . A list of programs from your selected category will appear. Press to access the list. Press to scroll through and highlight your selection, then press . (For more information see page 20 in your User's Guide.)

Quick Browse



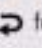 


Use the  directional keys located on the Navigation Panel in the center of your remote for information on what's playing on other channels. Press  to find out about preceding and upcoming events on any channel you are watching. Press  to find out more about the program in the pop-up menu. (For more information see page 23 in your User's Guide.)

Surf


Use the  button located at the lower right of the Navigation Panel of your remote, to view what's playing on other channels. To return to the last channel you were viewing, press  located below the number 7 on the Numeric Keypad. (For more information see page 23 in your User's Guide.)

Personal Identification Number/PIN



Your default PIN for both Pay-Per-View Purchases and the Blocking feature is 0000. It is recommended that you select two PIN(s): one for PPV and one for Blocking. (For more information, see Personal Identification Number on pages 28 and 32 in your User's Guide.) **To Order a Pay-Per-View (PPV) Event**

Press  located on the left, just below the Power Panel, to access the IPG. Press   for current time and channel. Use the  to go to channels 501-534 and to highlight your channel selection. (PPV listings begin on channel 501.) Press  located in the middle of the Navigation Panel. Enter the default PIN of 0000 or your personal PPV PIN. (For more information on Pay-Per-View, see page 30 in your User's Guide.)






To Order a Pay-Per-View Event for a Future Date or Time

Press  located on the left, just below the Power Panel, to access the IPG. Press   for current time and channel. Use the  to go to channels 501-594 and to highlight your channel selection. (PPV listings begin on channel 501.) Press  located in the middle of the Navigation Panel. Enter the default PIN of 0000 or your personal PPV PIN. (For more information on Pay-Per-View future events, see page 28 in your User's Guide.)





Recording a Current Program

Tune to the program you'd like to record. Place a blank tape in the VCR. Press  located to the left of the Navigation Panel, once. The QUICK SETTINGS Screen will appear. Highlight **Start Recording Now** and press . (To record from the IPG, see page 41 in your User's Guide)

Taping Future Programs

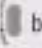 
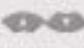 

At the IPG, use the directional keys,  and  located in the Navigation Panel to find the feature you would like to record. The  allows you to highlight a program, and the  to highlight a future date and time. Press , located in the center of the Navigation Panel, to finalize your selection. The FUTURE OPTIONS prompt appears. Insert a blank tape into the VCR and follow the instructions on the screen. (For more information, see page 42 in your User's Guide.)

To Set a Future Program Reminder

Use the  to highlight a future program in the IPG. Press , located in the center of the Navigation Panel. The FUTURE PROGRAM OPTIONS screen appears. Use the  to highlight one of the options. Press  to set the timer and return to the main IPG screen. (For More Information see **Timer:Remind New** on page 44 of your User's Guide.)

Parental Control

Before using Parental Control, you must choose your options to block by channel, by time, or by rating in GENERAL SETTINGS. (See **Block:Time; Block:Rating** on pages 33-34 of your User's Guide.)

Press the  button, located in the Navigation Panel of your remote and the QUICK SETTINGS screen will appear. Use  to highlight the Parental Control OFF / ON option and press . The PERSONAL IDENTIFICATION NUMBER (PIN) entry screen will appear.

Use the Numeric Keypad to enter your BLOCKING PIN, to turn the Parental Control OFF/ON. The default PIN for blocking is 0000.